

6a Remove transceiver cover; then hold down Programming button on circuit board for 3 seconds and let go.

LED will light solid red

6b Remove RTE unit front panel; then hold down Reset button on circuit board for 5 seconds and let go.
(Make sure battery is connected)

6c While pairing, RTE unit will beep momentarily. Once transceiver LED goes out, pairing is complete.

LED will go out

7 Make sure gate/door path is clear; then press exit button on RTE unit and confirm gate/door opens.
(If nothing happens, repeat Step 6)

INSTALLATION COMPLETE!

Your system is ready to use.

A The RTE unit can be disabled and re-enabled at any time by taking the key switch keys and using the key switch located below the exit button.

Unit Enabled
(exit button active)

Unit Disabled
(exit button inactive)


B Unit Reset Procedure

This procedure is used to reset unit to factory default settings.

- Step 1 - Remove front panel of RTE unit.**
- Step 2 - Disconnect battery.**
- Step 3 - Press and hold Reset Button; reconnect battery; then release Reset Button.**
Unit will sound one (1) tone. Release Reset Button after you hear tone.
- Step 4 - Press and release Reset Button; then reattach front panel onto RTE unit.**

The unit is now reset to factory default settings.

Notes

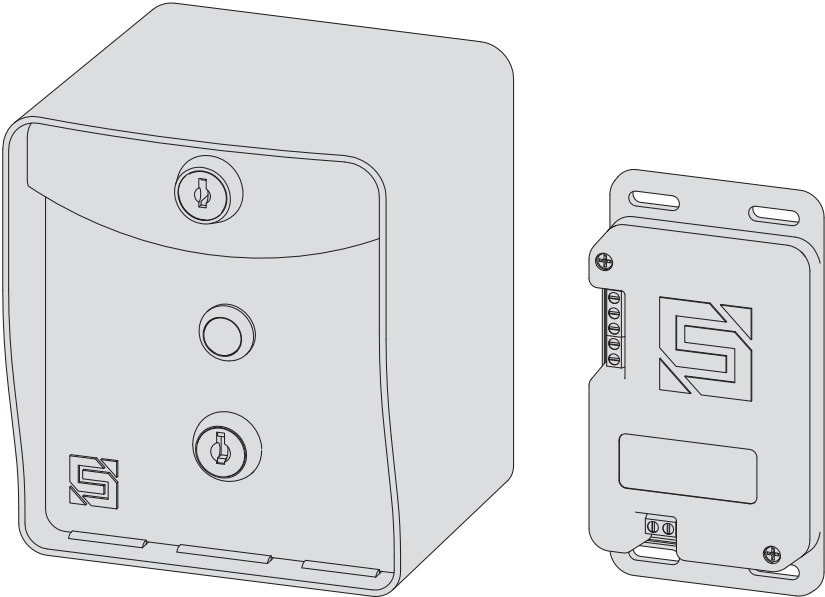

Ridge RTE
14-RTE433