





WIRING GUIDE

Edge + Intercom (27-215, 27-225HID, 27-225SK) to Third-Party Base Station

Edge (27-215, 27-225HID, 27-225SK)

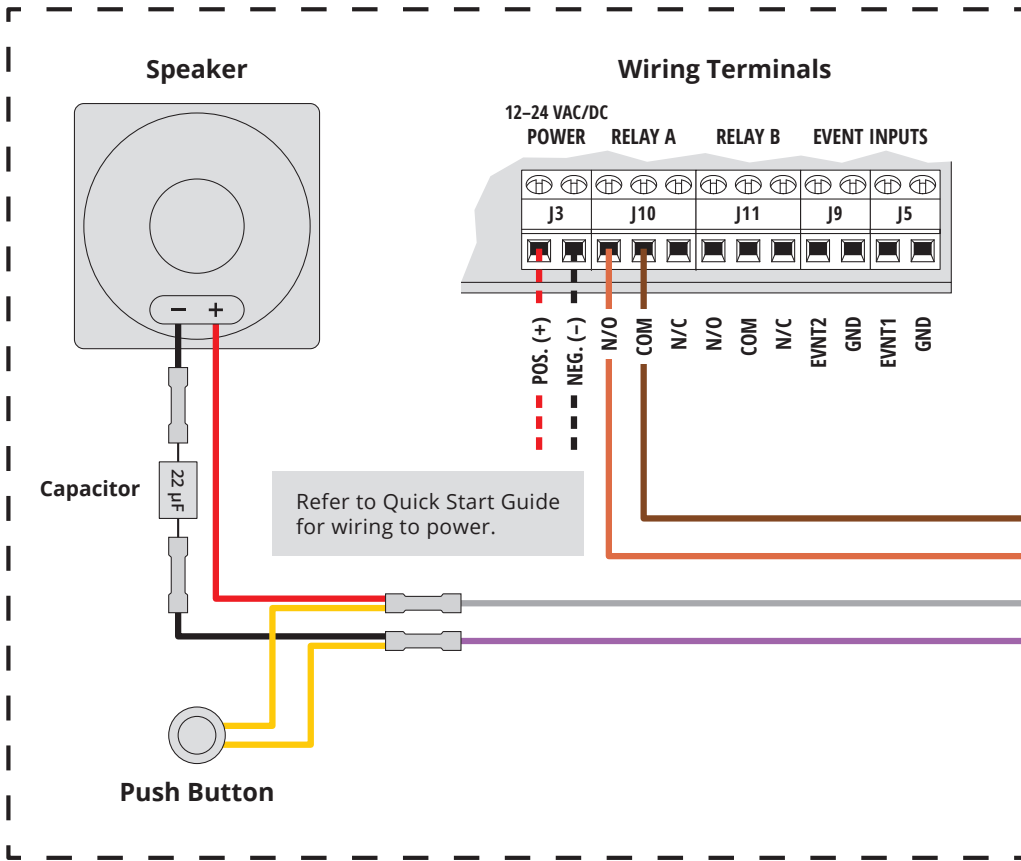

Base Station

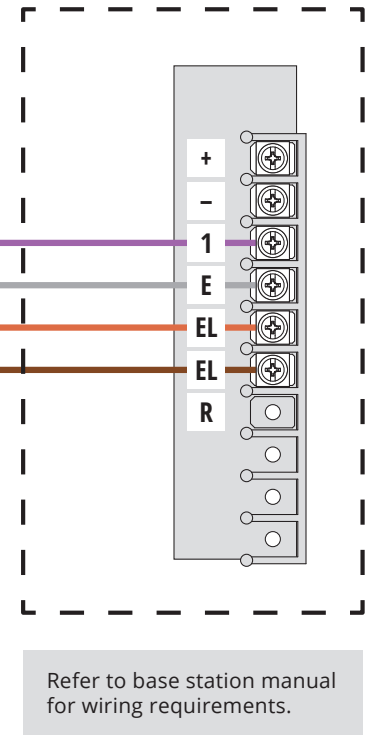

To Gate Operator Open Input

