

How to Program and Pair the Ridge Wireless Keypad

Congratulations on the purchase of your Ridge keypad from Summit Access Control! Follow these easy steps to open your gate with the keypad.


A. Before you pair the keypad with your Nice Apollo receiver, you will need to program your codes.

1. Enter master code 1251 into the keypad.
2. You will hear a beep.
3. Press the number one (1) key, and the keypad will beep again.
4. Enter the personal 4-digit code you want to use to open your gate.
5. You will hear two short beeps.
6. After the beeps, press the pound (#) key.
7. You have now programmed your code.
8. *This keypad can support up to 100 unique codes. If you want to set up more codes, repeat steps 1-7. Otherwise, proceed to step 9.*
9. The keypad has been programmed. You can now proceed to step B1 or B2 to pair the keypad with your receiver.



B1. Pairing the Keypad with the OXI/A or SMXI/A Plug-In Receiver

1. Press and hold the receiver button until the receiver light turns on.
2. Enter a 4-digit code you chose in the above steps.
3. The receiver light will blink 3 times as a confirmation, and then remain solid.
4. **Wait until the light turns off and remains off.**
5. Test your keypad.
6. If the gate opens after entering your personal 4-digit code, you have successfully installed your keypad!

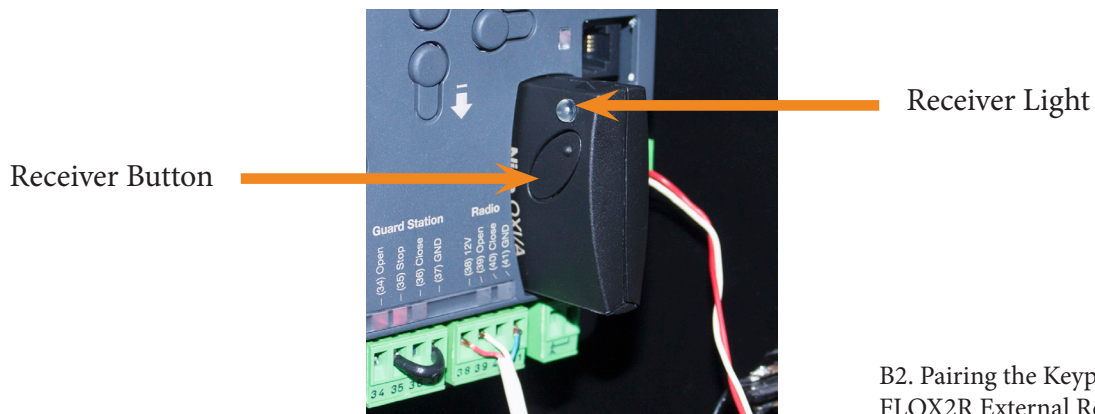


B2. Pairing the Keypad with the 318N or FLOX2R External Receiver →

B2. Pairing the Keypad with the 318N or FLOX2R External Receiver

This receiver is time sensitive. Please read through all of the following steps before starting the pairing process.

1. Press (**do not hold**) the yellow receiver button.
2. The receiver light will turn on.
3. Enter a 4-digit code you chose in step A when you programmed your keypad.
4. The receiver light will turn off.
5. **Wait 4 seconds - no more, no less.**
6. Enter your 4-digit code again.
7. The light will blink 3 times slowly as a confirmation. It may also blink quickly after these slow blinks.
8. Wait until the light turns off.
9. Test your keypad.
10. If the gate opens after entering your personal 4-digit code, you have successfully installed your keypad!

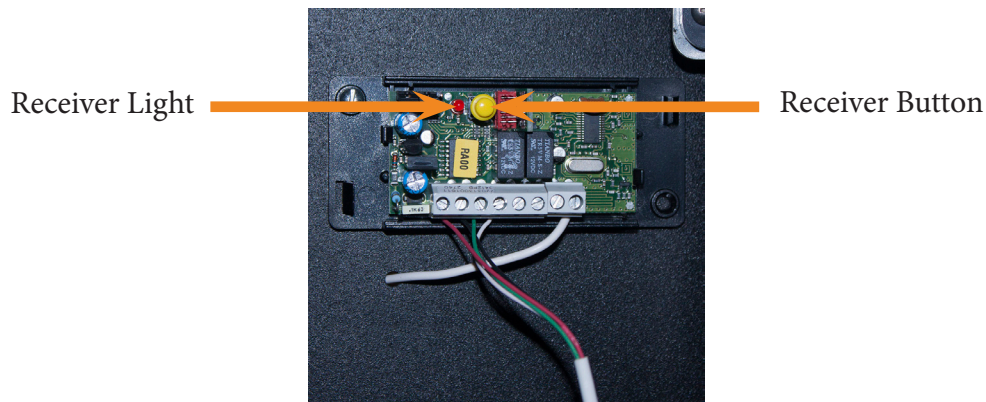

Common Problems with B2.

1. Waiting too long after step 5. If you wait longer than 4 seconds, the receiver light will blink up to 9 times. Wait until the light has turned completely off. You will need to start over with step 1.
2. The keypad does not open the gate after step 9. You have not successfully installed your keypad. You will need to start over with step 1.